

## LOCK BAR LENGTHS

Horizontal mount rough opening measurements are the height of openings measured vertically (see mounting reference page below). Rough opening height measurement values are based on industry panel size standards.

<u>HEIGHT</u>	<u>LOCK BAR LENGTH</u>	<u>CENTER BRACE</u>
13 In.	19 In. mdl# LB019PKG	0
26 In.	32 In. mdl# LB032PKG	0
39 In.	45 In. mdl# LB045PKG	0
52 In.	57 In. mdl# LB057PKG	0
65 In.	71 In. mdl# LB071PKG	0
78 In.	84 In. mdl# LB084PKG	(1) mdl# RCB or CCB
91 In.	97 In. mdl# LB097PKG	(1) mdl# RCB or CCB
104 In.	110 In. mdl# LB110PKG	(1) mdl# RCB or CCB

## EXTENSION BAR LENGTHS

Extension Bars can be added to Lock Bars to increase lengths to desired unlimited lengths. Center Brace mdl# CCB recommended for use with panel widths greater than 65 inches.

<u>HEIGHT</u>	<u>LOCKING &amp; EXTENSION BAR</u>	<u>CENTER BRACE</u>
117 In.	110 In. mdl# LB110PKG & (1) 19 In. mdl# EB019	(1) mdl# CCB
130 In.	110 In. mdl# LB110PKG & (1) 32 In. mdl# EB032	(2) mdl# CCB
143 In.	110 In. mdl# LB110PKG & (1) 45 In. mdl# EB045	(2) mdl# CCB
156 In.	110 In. mdl# LB110PKG & (1) 57 In. mdl# EB057	(2) mdl# CCB
169 In.	110 In. mdl# LB110PKG & (1) 71 In. mdl# EB057	(2) mdl# CCB
182 In.	110 In. mdl# LB110PKG & (1) 84 In. mdl# EB084	(2) mdl# CCB
195 In.	110 In. mdl# LB110PKG & (1) 97 In. mdl# EB097	(2) mdl# CCB
208 In.	110 In. mdl# LB110PKG & (1) 110 In. mdl# EB110	(2) mdl# CCB


## HALF PANEL EXTENSION BAR

Half Panel Extension Bar can be used in conjunction with Lock Bars and Extension Bars to add short odd configuration lengths. (Note Lock Bar and Extension Bars can be used in any combination to achieve desired lengths.)

12 In. mdi# HEB012

## MOUNTING REFERENCE

Window or Door opening

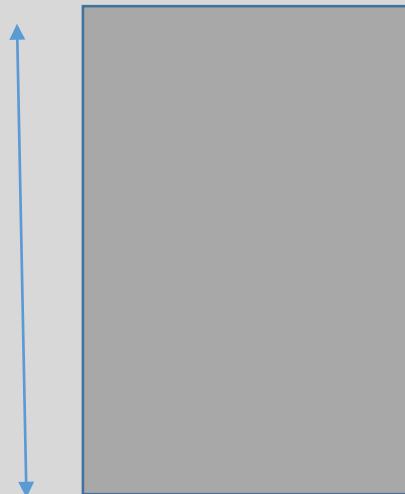

Height measurement